Accessories



Standard

Adapter



PWR-C66-5V2A-CN



PWR-C66-5V2A-EU



PWR-C66-5V2A-UK



PWR-C66-5V2A-US

Adapter(CN/EU/UK/US), I/P: 100-240V, O/P: 5V2A, use with DC-BK-TypeC cable

QC Adapter



PWR-18W-CN



PWR-18W-EU



PWR-18W-UK



PWR-18W-US

Quick Charge adapter(CN/EU/UK/US), I/P: 100-240V, O/P: 5V3A/12V1.5A/9V2A, use with DC-BK-TypeC cable Comment: standard adaptor and QC adaptor are alternative.

USB Cable

DC-BK-TypeC 1.0 meter Type-C cable

Battery



4300mAh Li-ion battery, 3.8V ouput

BTRY-C66-43MA

Optional

Rugged Rubber Boot



RB-C66-RR/RB-C66-RRP Rugged Rubber Boot only,

omni-directional protected. RB-C66-RR does not support charging cradle.

RB-C66-RRP is pre installed with Type C & Pogo Pin I/O connector, then it supports CRD-C66-RBC/CRD-C66-RBCE charging cradle.



Rugged Rubber Boot with hand strap, omni-directional protected.

RB-C66-RRH does not support charging cradle.

RB-C66-RRHP is pre installed with Type C & Pogo Pin I/O

connector, then it supports CRD-C66-RBC/CRD-C66-RBCE charging cradle.



Rugged Rubber Boot with belt clip, omni-directional protected.

RB-C66-RRC does not support charging cradle.

RB-C66-RRCP is pre installed with

Type C & Pogo Pin I/O

connector, then it supports CRD-C66-RBC/CRD-C66-RBCE charging cradle.



Type C & Pogo Pin I/O Connector, to


be mounted with the rugged rubber boot, enable it to support charging cradle(CRD-C66-RBC/RBCE).The wired network is available when the rugged rubber boot is placed on the cradle(CRD-C66-RBCE).




RB-C66EXT-RRP is pre installed with Type C & Pogo Pin I/O connector,

then it supports CRD-C66EXT-RBC/CRD-C66EXT-RBCE charging cradle.

Charging Cradles & Adapters

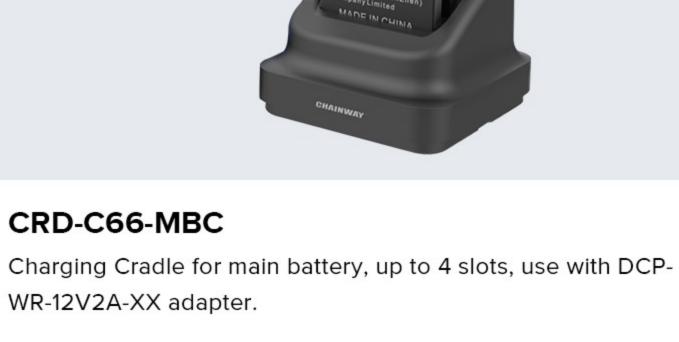

CRD-C66-RBC

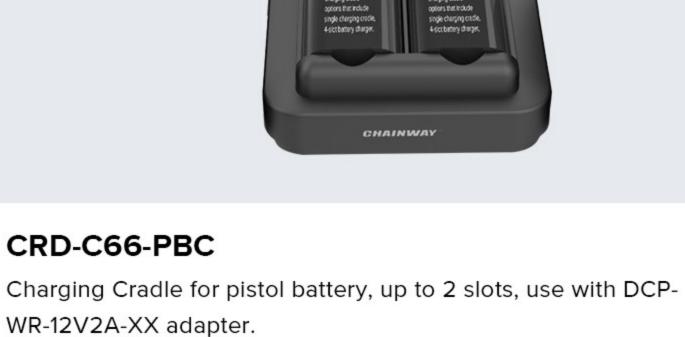


EU

CN

DCPWR-12V2A-XX

UK

Adapter(CN/EU/UK/US), I/P: 100-240V, O/P: 12V2A, DC

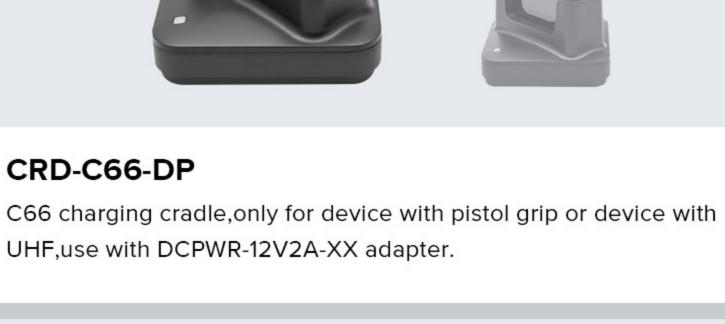


CRD-C66-RBC/CRD-C66-RBCE

CRD-C66-INS

C66 with Rugged Boot.

US

EU

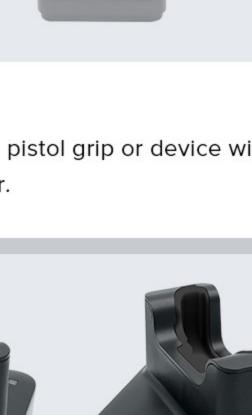


Charging Cradle for device, use with DCPWR-12V2A-XX adapter. CRD-C66-RBCE is an advanced CRD-C66-RBC, w/sync, w/ethernet, w/DC. The cradle cup has an insert that must be removed prior to inserting the

CRD-C66-RBCE

CRD-C66EXT-INS CRD-C66EXT-RBC / CRD-C66EXT-RBCE

DCPWR-12V2A-XX adapter.


CRD-C66EXT-RBC device, include the cradle cup(CRD-C66EXT-INS), support volume

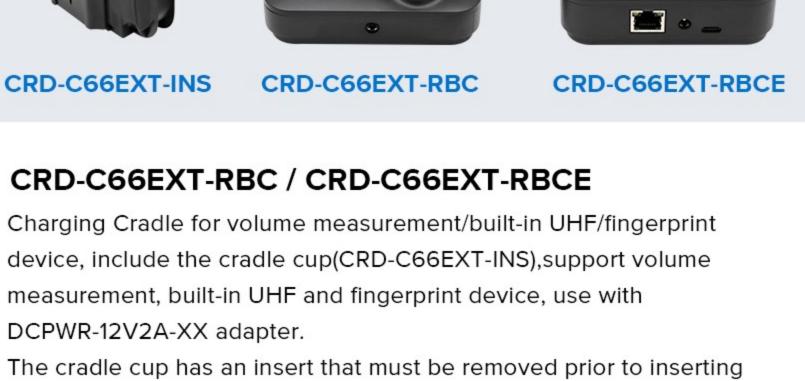


US


Rugged Boot.

the volume measurement, built-in UHF and fingerprint device with

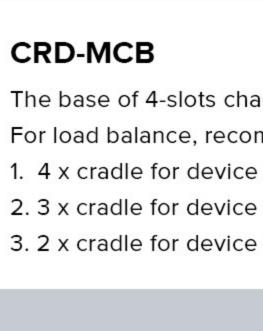

For load balance, recommendation: 2. 3 x cradle for device + 1 x cradle for main battery 3. 2 x cradle for device + 1 x cradle for main battery + 1 x cradle for pistol battery

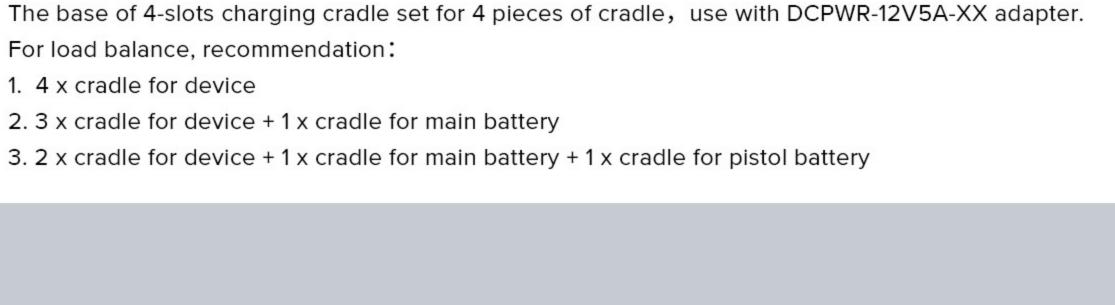

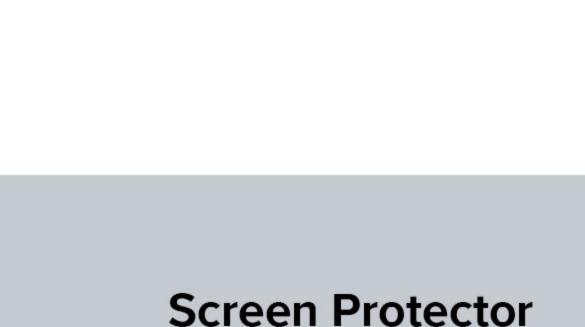


Vehicle Cradle

Hand Strap Rubber Bumper




Vehicle Charger Cradle, with type-C, use with DC-BK-TypeC cable. Car holder and car adapter need to be purchased separately


30mm _

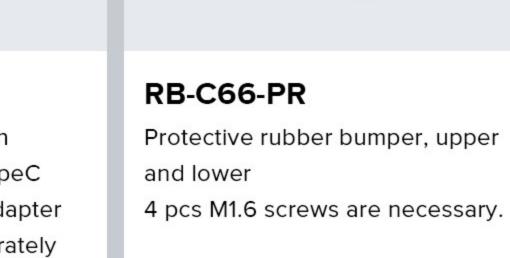

RB-C66-HS Hand strap with buckle 2 pcs M1.6 screws are necessary.

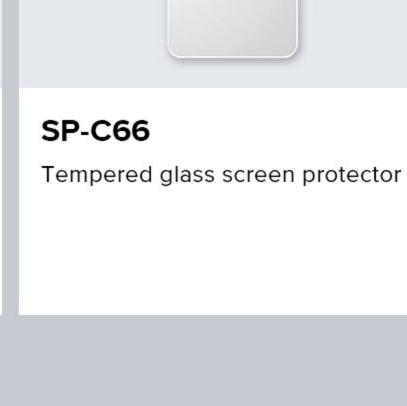

Pistol Grip

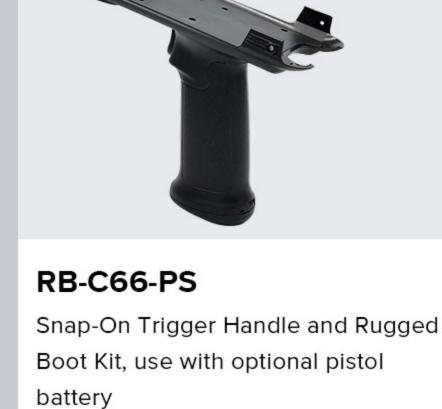

4 pcs M1.6 screws are necessary.



BTY-C66-PB

Pistol battery, 5,200 mAh

CHAINWAY®